
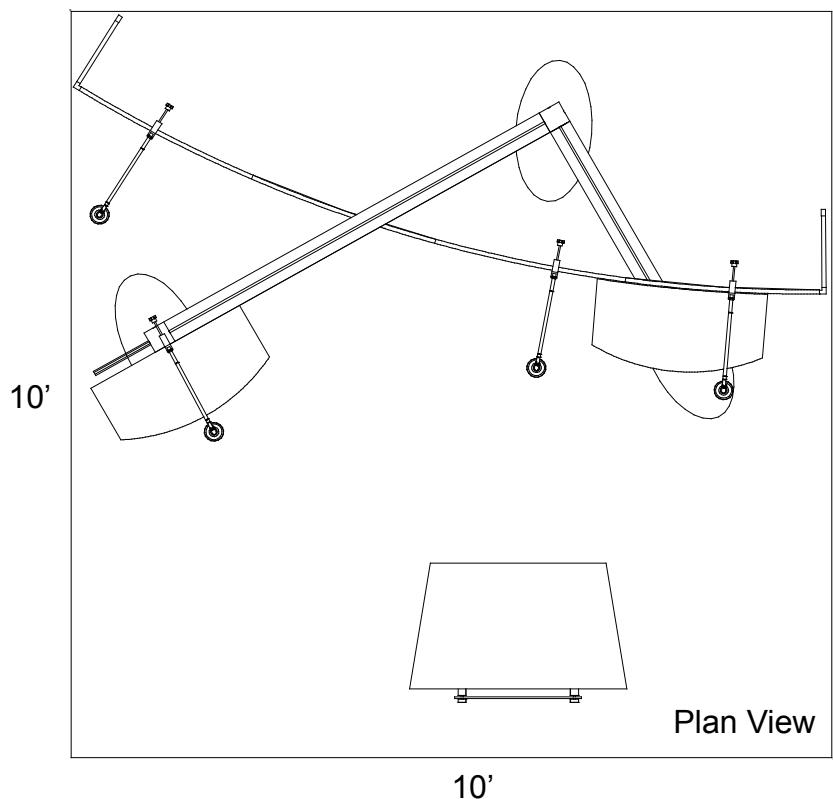


euro It | HYBRIDS

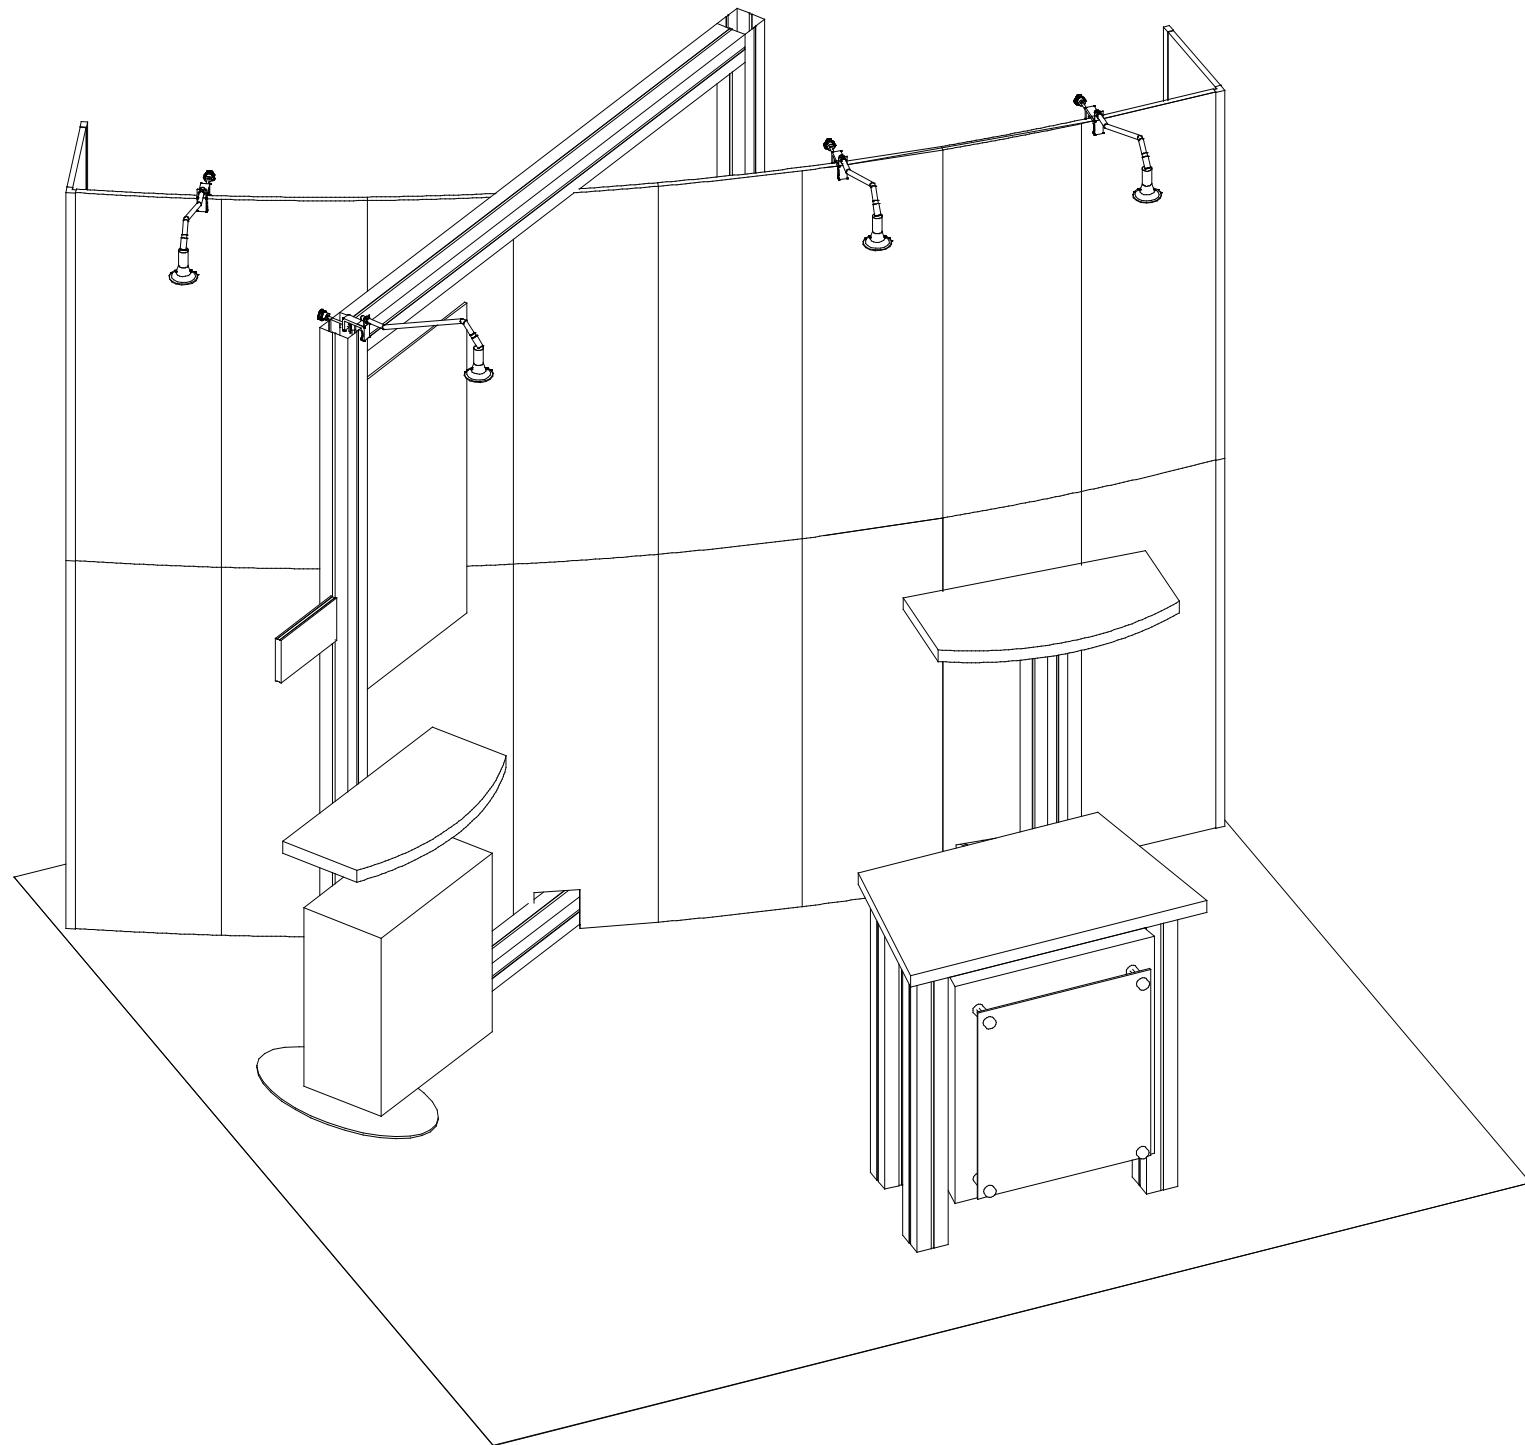

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

euro lt | HYBRIDS

Using Your Setup Instructions


The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.

Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is **VERY IMPORTANT**.

Cleaning and Packing Your Display

- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

General Setup Instructions for Panel System

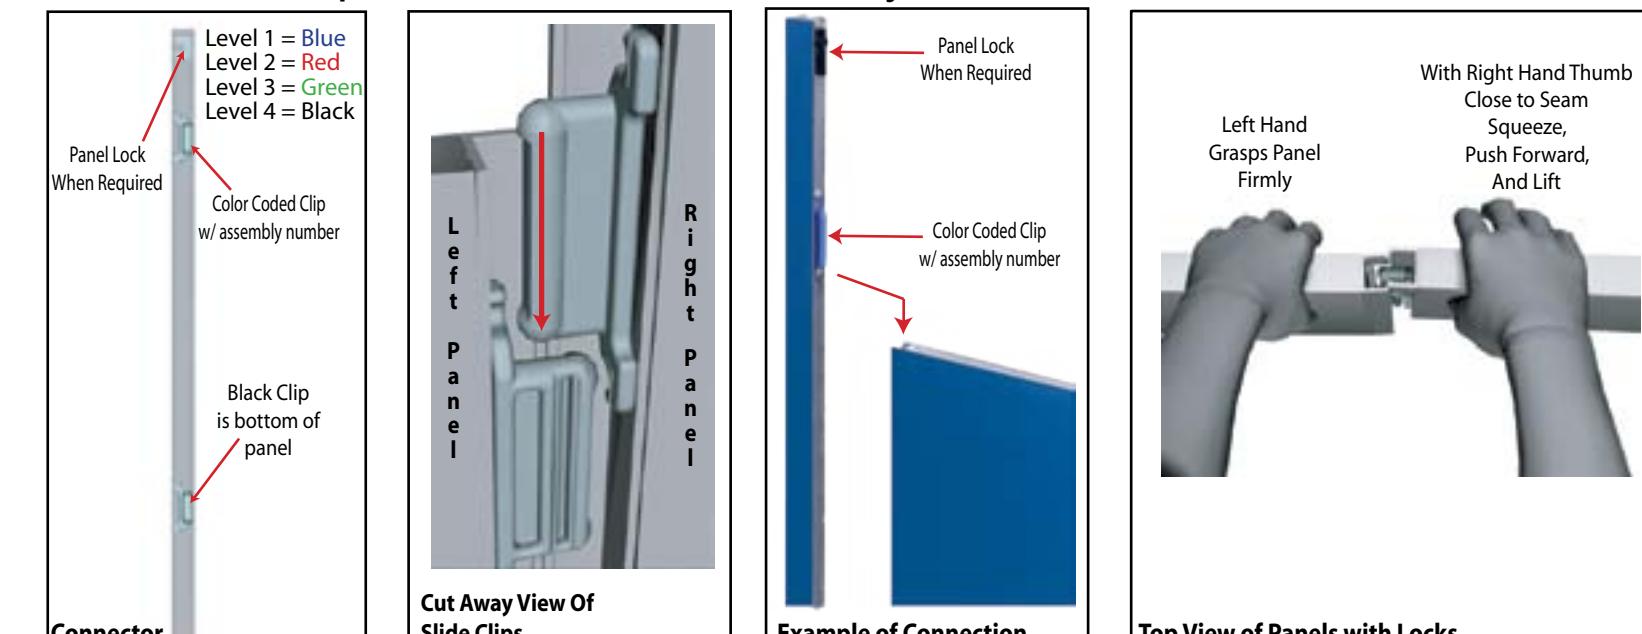


Each component has 2 clips, the lower clip is **ALWAYS** black. The top clip is color coded to distinguish the level. The color coded clip also contains the numbered label.

Components connect together by aligning them and sliding downward connecting clips together.

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

The first level of components contains panel locks that are located at the top of the panel for extra stability and a seamless connection. When disassembling panels, twist top connection slightly and lift right panel upward.

General Setup Instructions for Extrusion System

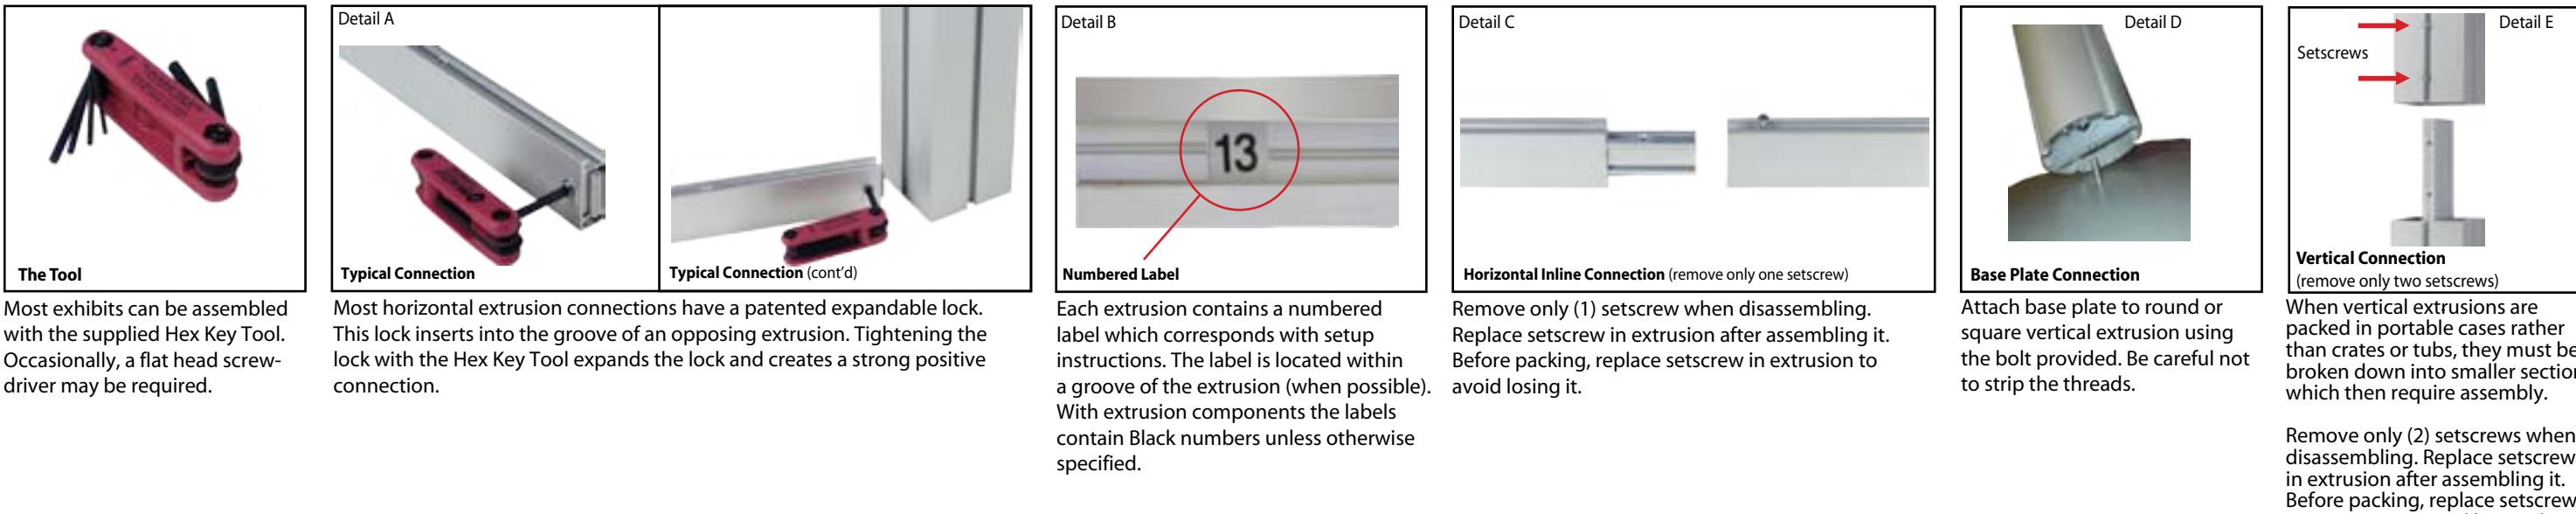

Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.

Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.

Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller sections which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING


Part Number	Qty for Step	Description
1	3	Base Plate
2	1	98.5286" h Vertical Extrusion
3	1	98.5286" h Vertical Extrusion
4	1	38" h Vertical Extrusion
4A	1	Plate For Counter Connection
5	2	68.061" w Horizontal Extrusion
6	1	35.531" w Horizontal Extrusion
11	1	Stabilizer Extrusion

Steps

- 1) Attach vertical extrusions [2, 3 and 4] to base plates [1], and plate for counter connection [4A] to extrusion [4], see detail D on General Information page.
- 2) Connect lower horizontal extrusion [5] between vertical extrusions [2 and 3] as shown.

NOTE: Upper Horizontal extrusion [5] can not be assembled until AFTER the Euro LT Panel Section is Assembled.

- 2) Connect horizontal extrusion [6] between vertical extrusions [3 and 4] as shown.
- 3) Attach stabilizer extrusion [11] between extrusions [3 and 6] as shown.

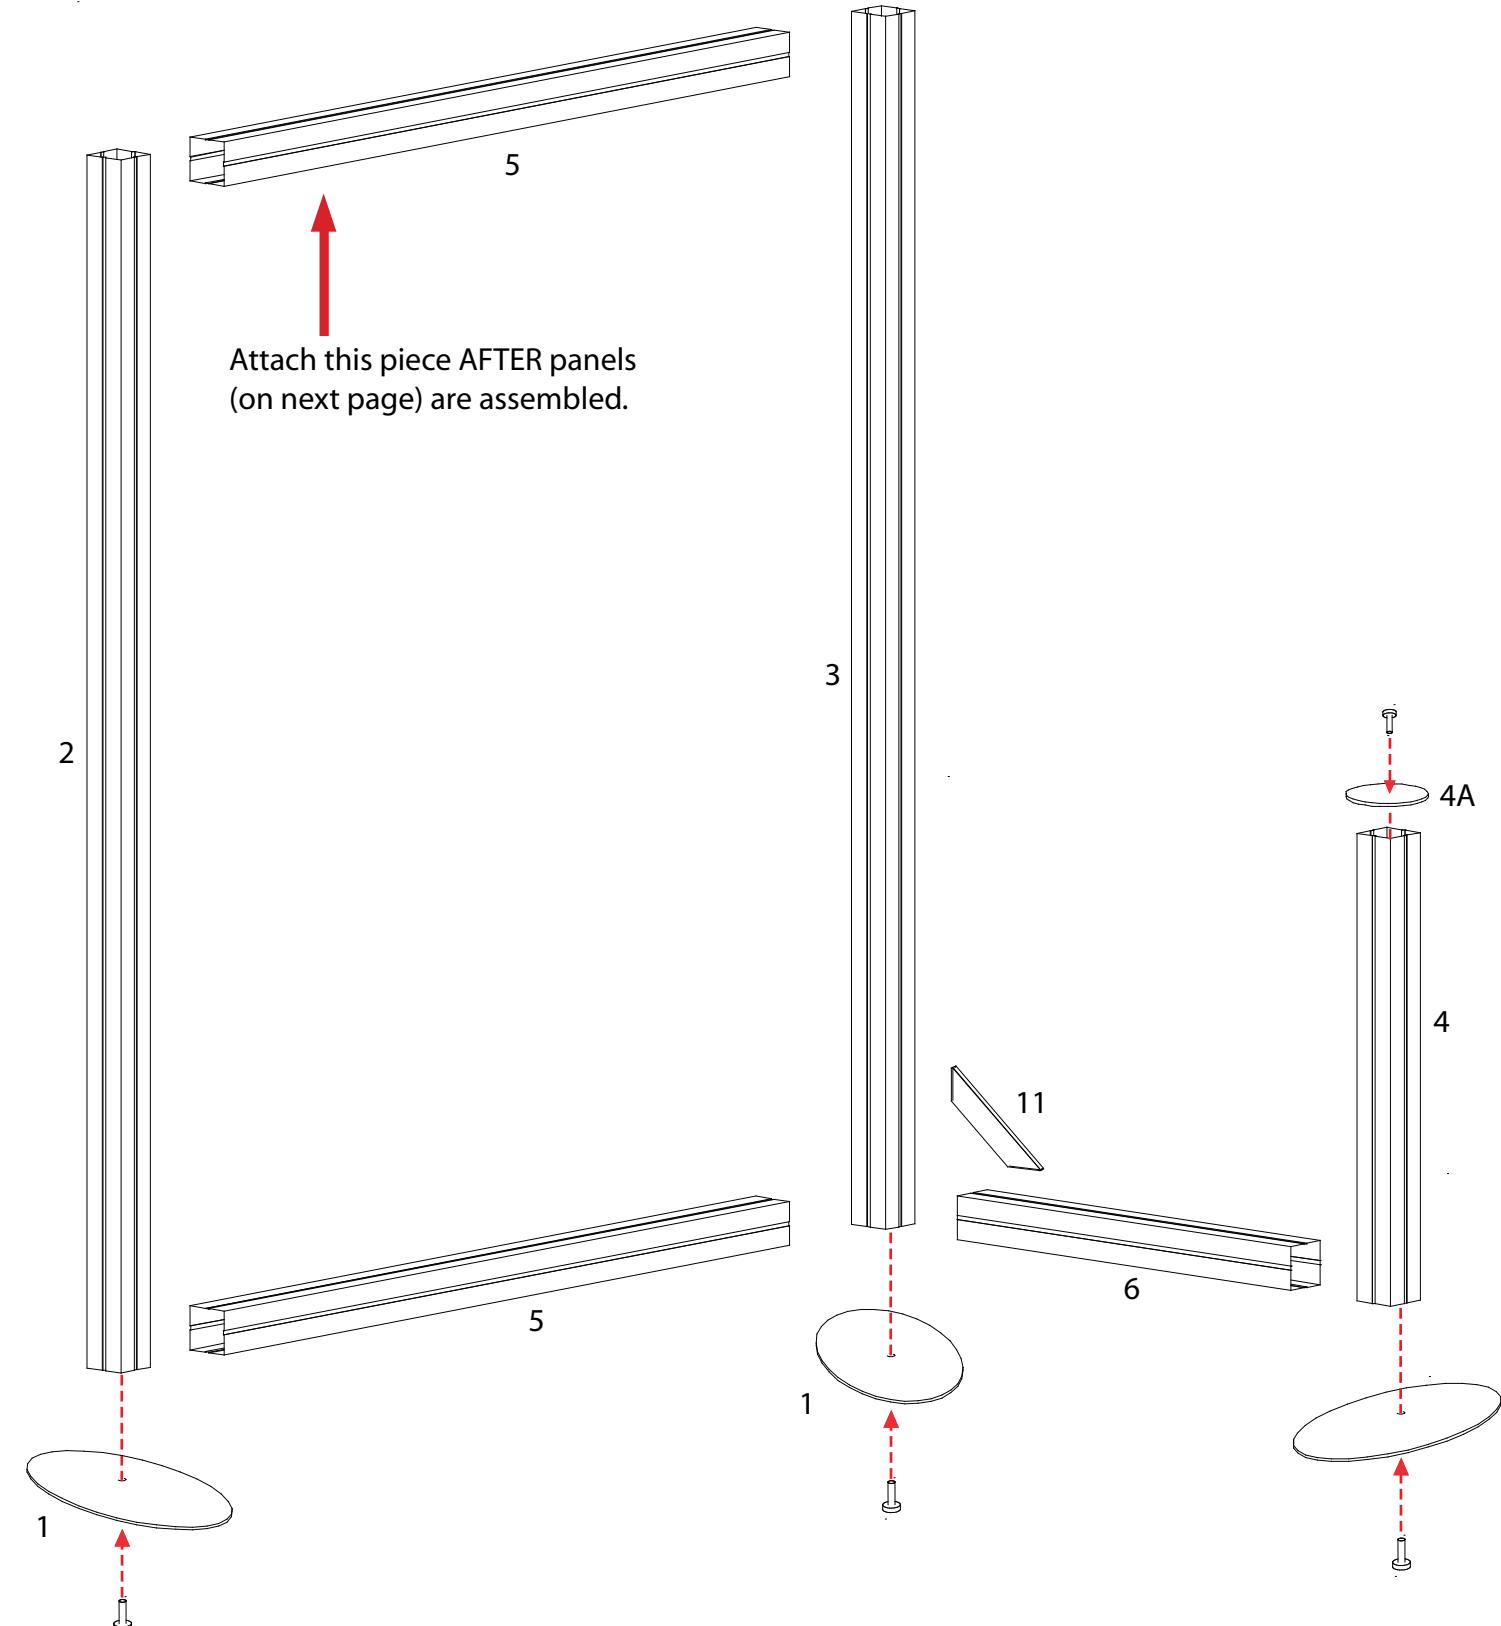


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item Number	Description
1	47.5" End Cap
2	11.5" w x 47.5" h Flat Panel w/ Wood Fill
3	47.5" h 90° Connector
4	47.5" h Custom Curve Panel
5	47.5" h Custom Curve Panel
6	47.5" h Custom Curve Panel
7	47.5" h Custom Curve Panel
8	47.5" h 90° Connector
9	11.5" w x 47.5" h Flat Panel w/ Wood Fill
10	47.5" End Cap

Steps:
Connect panels together in numerical order
as shown in illustrations.

Set atop assembled visions section.

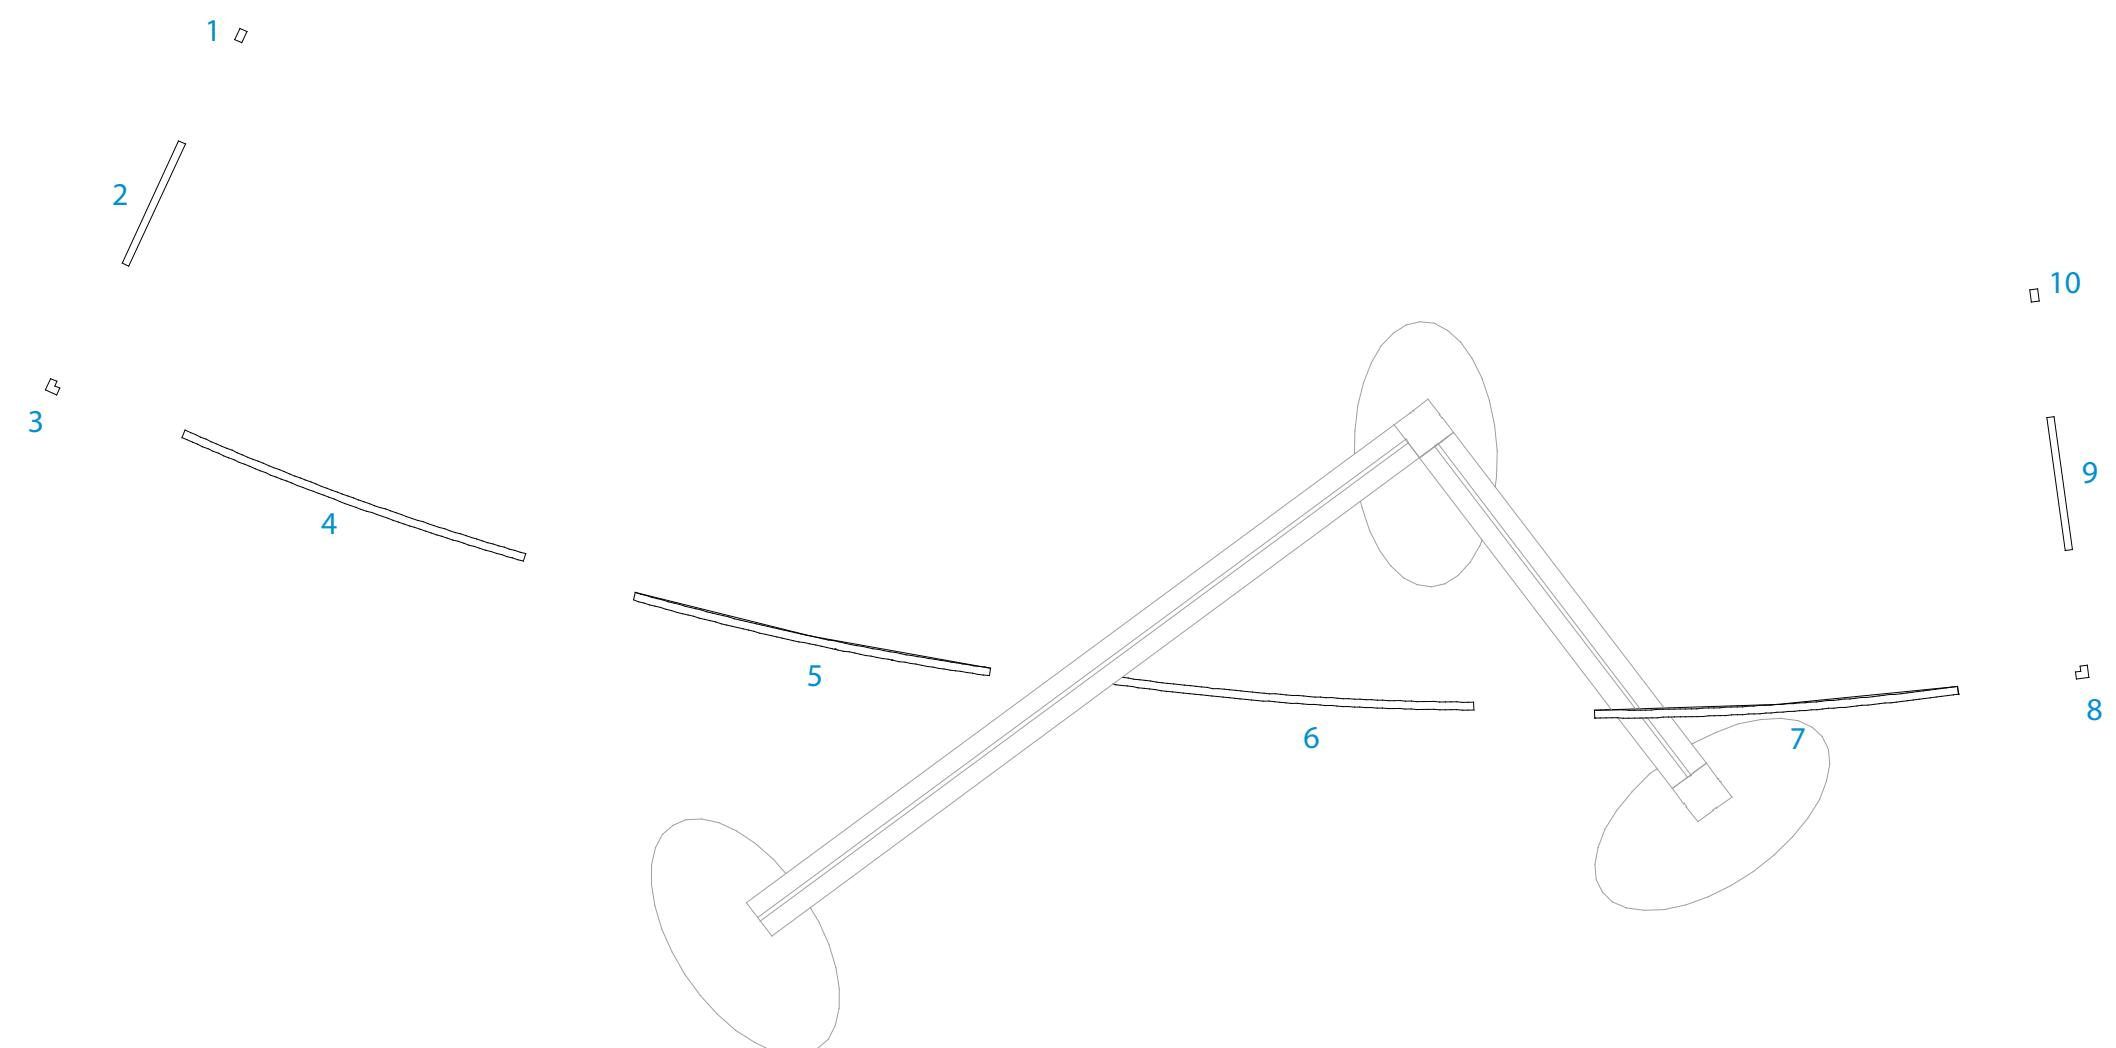




WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100

Item Number	Description
1	47.5" h End Cap
2	11.5" w x 47.5" h Flat Panel w/ Wood Fill
3	47.5" h 90° Connector
4	47.5" h Custom Curve Panel
5	47.5" h Custom Curve Panel
6	47.5" h Custom Curve Panel
7	47.5" h Custom Curve Panel
8	47.5" h 90° Connector
9	11.5" w x 47.5" h Flat Panel w/ Wood Fill
10	47.5" h End Cap


Steps:
Connect panels together in numerical order
as shown in illustrations.

Then Connect horizontal extrusion [5]
between vertical extrusions [2 and 3].

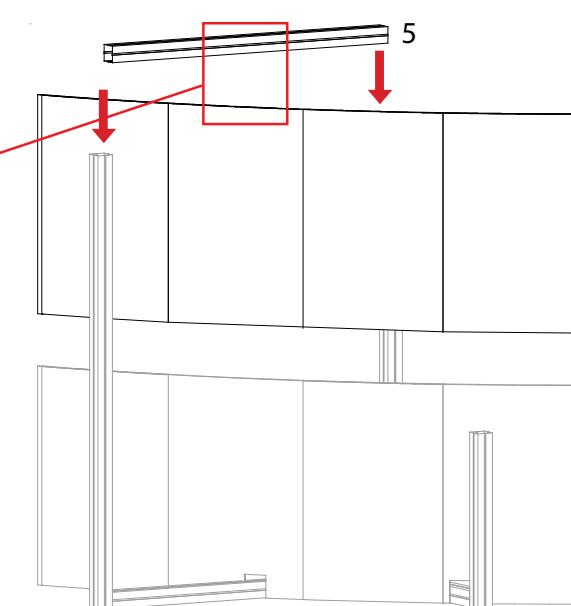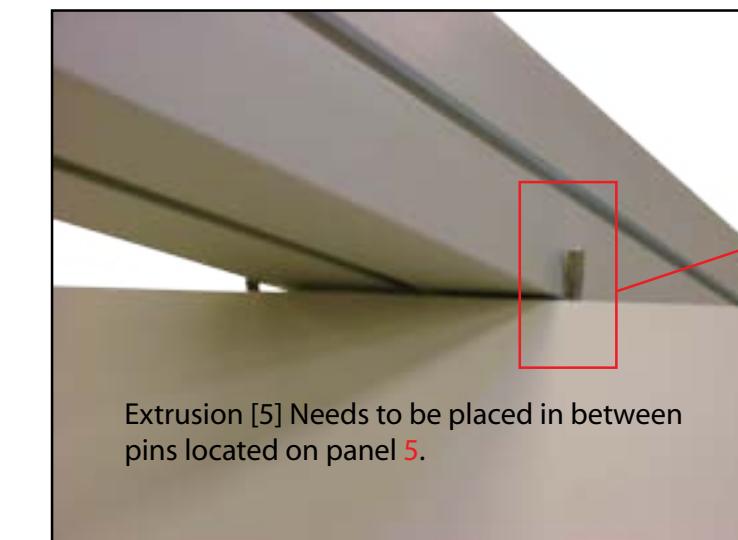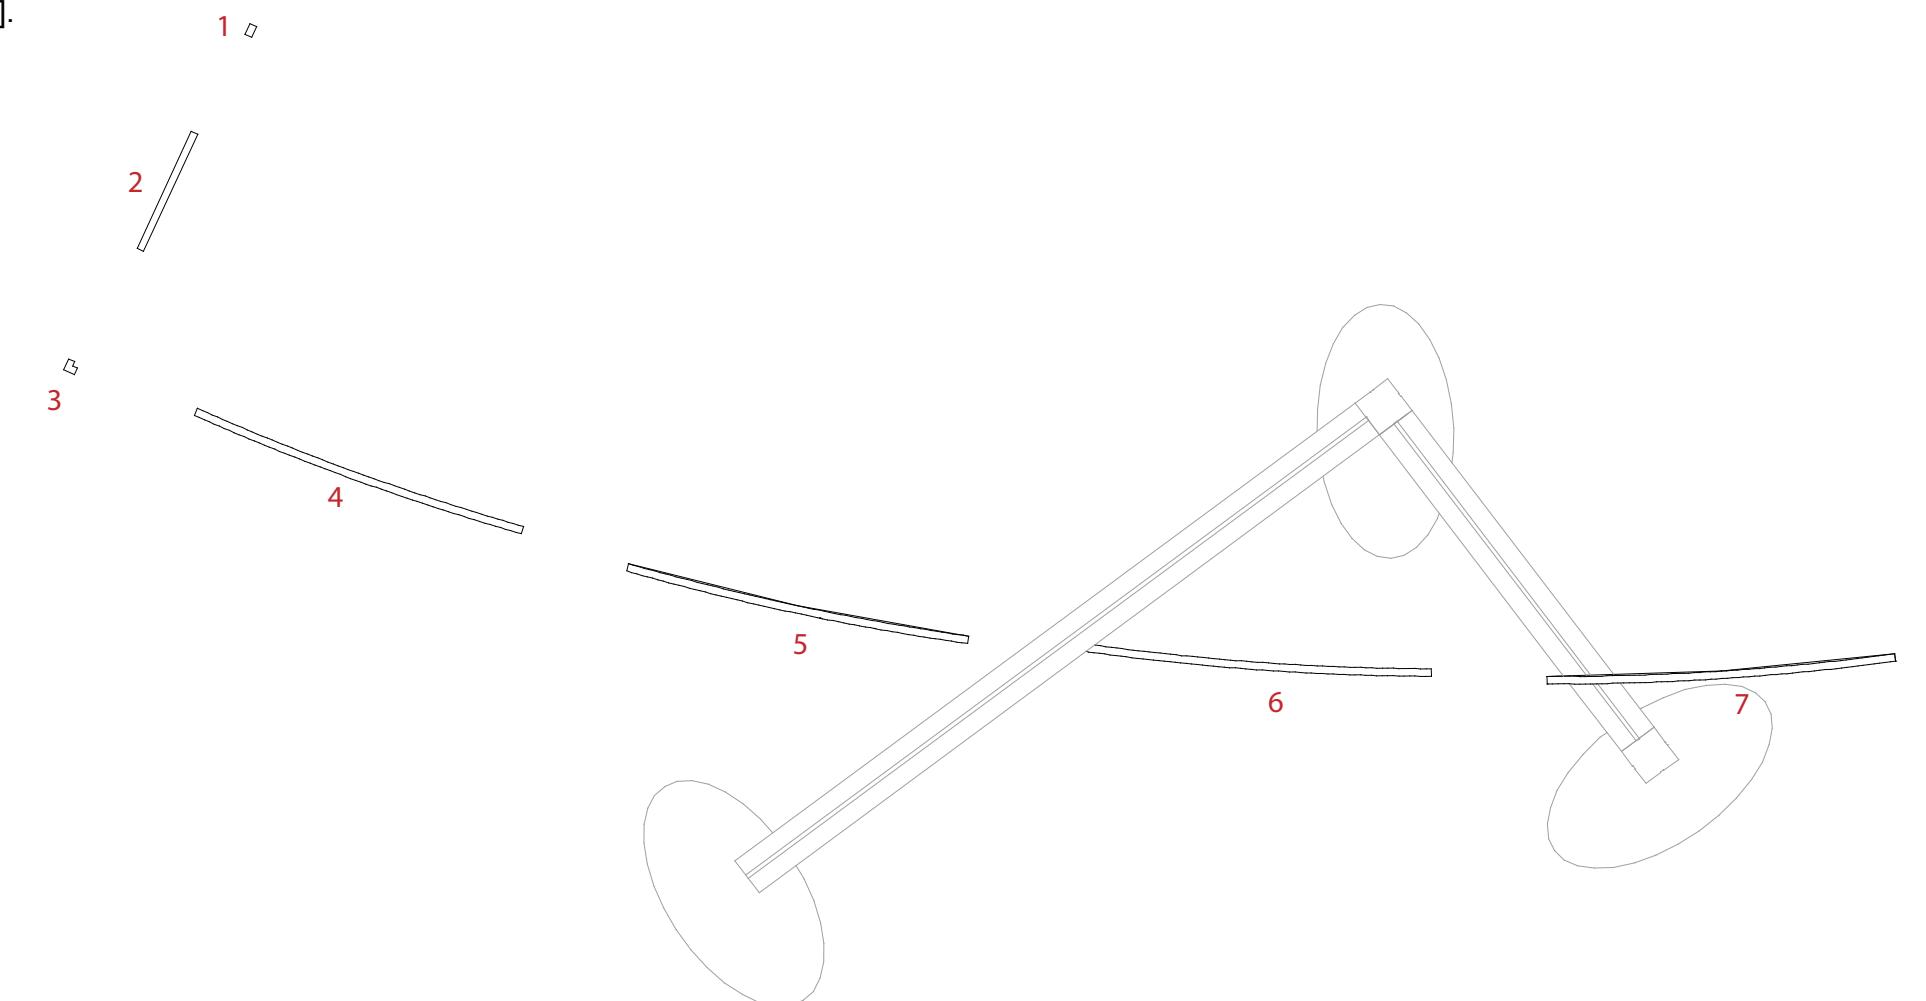

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

Part Number	Qty for Step	Description
7	1	Extrusion for Monitor Monitor Attachment
7A	1	Shelf Support Extrusion

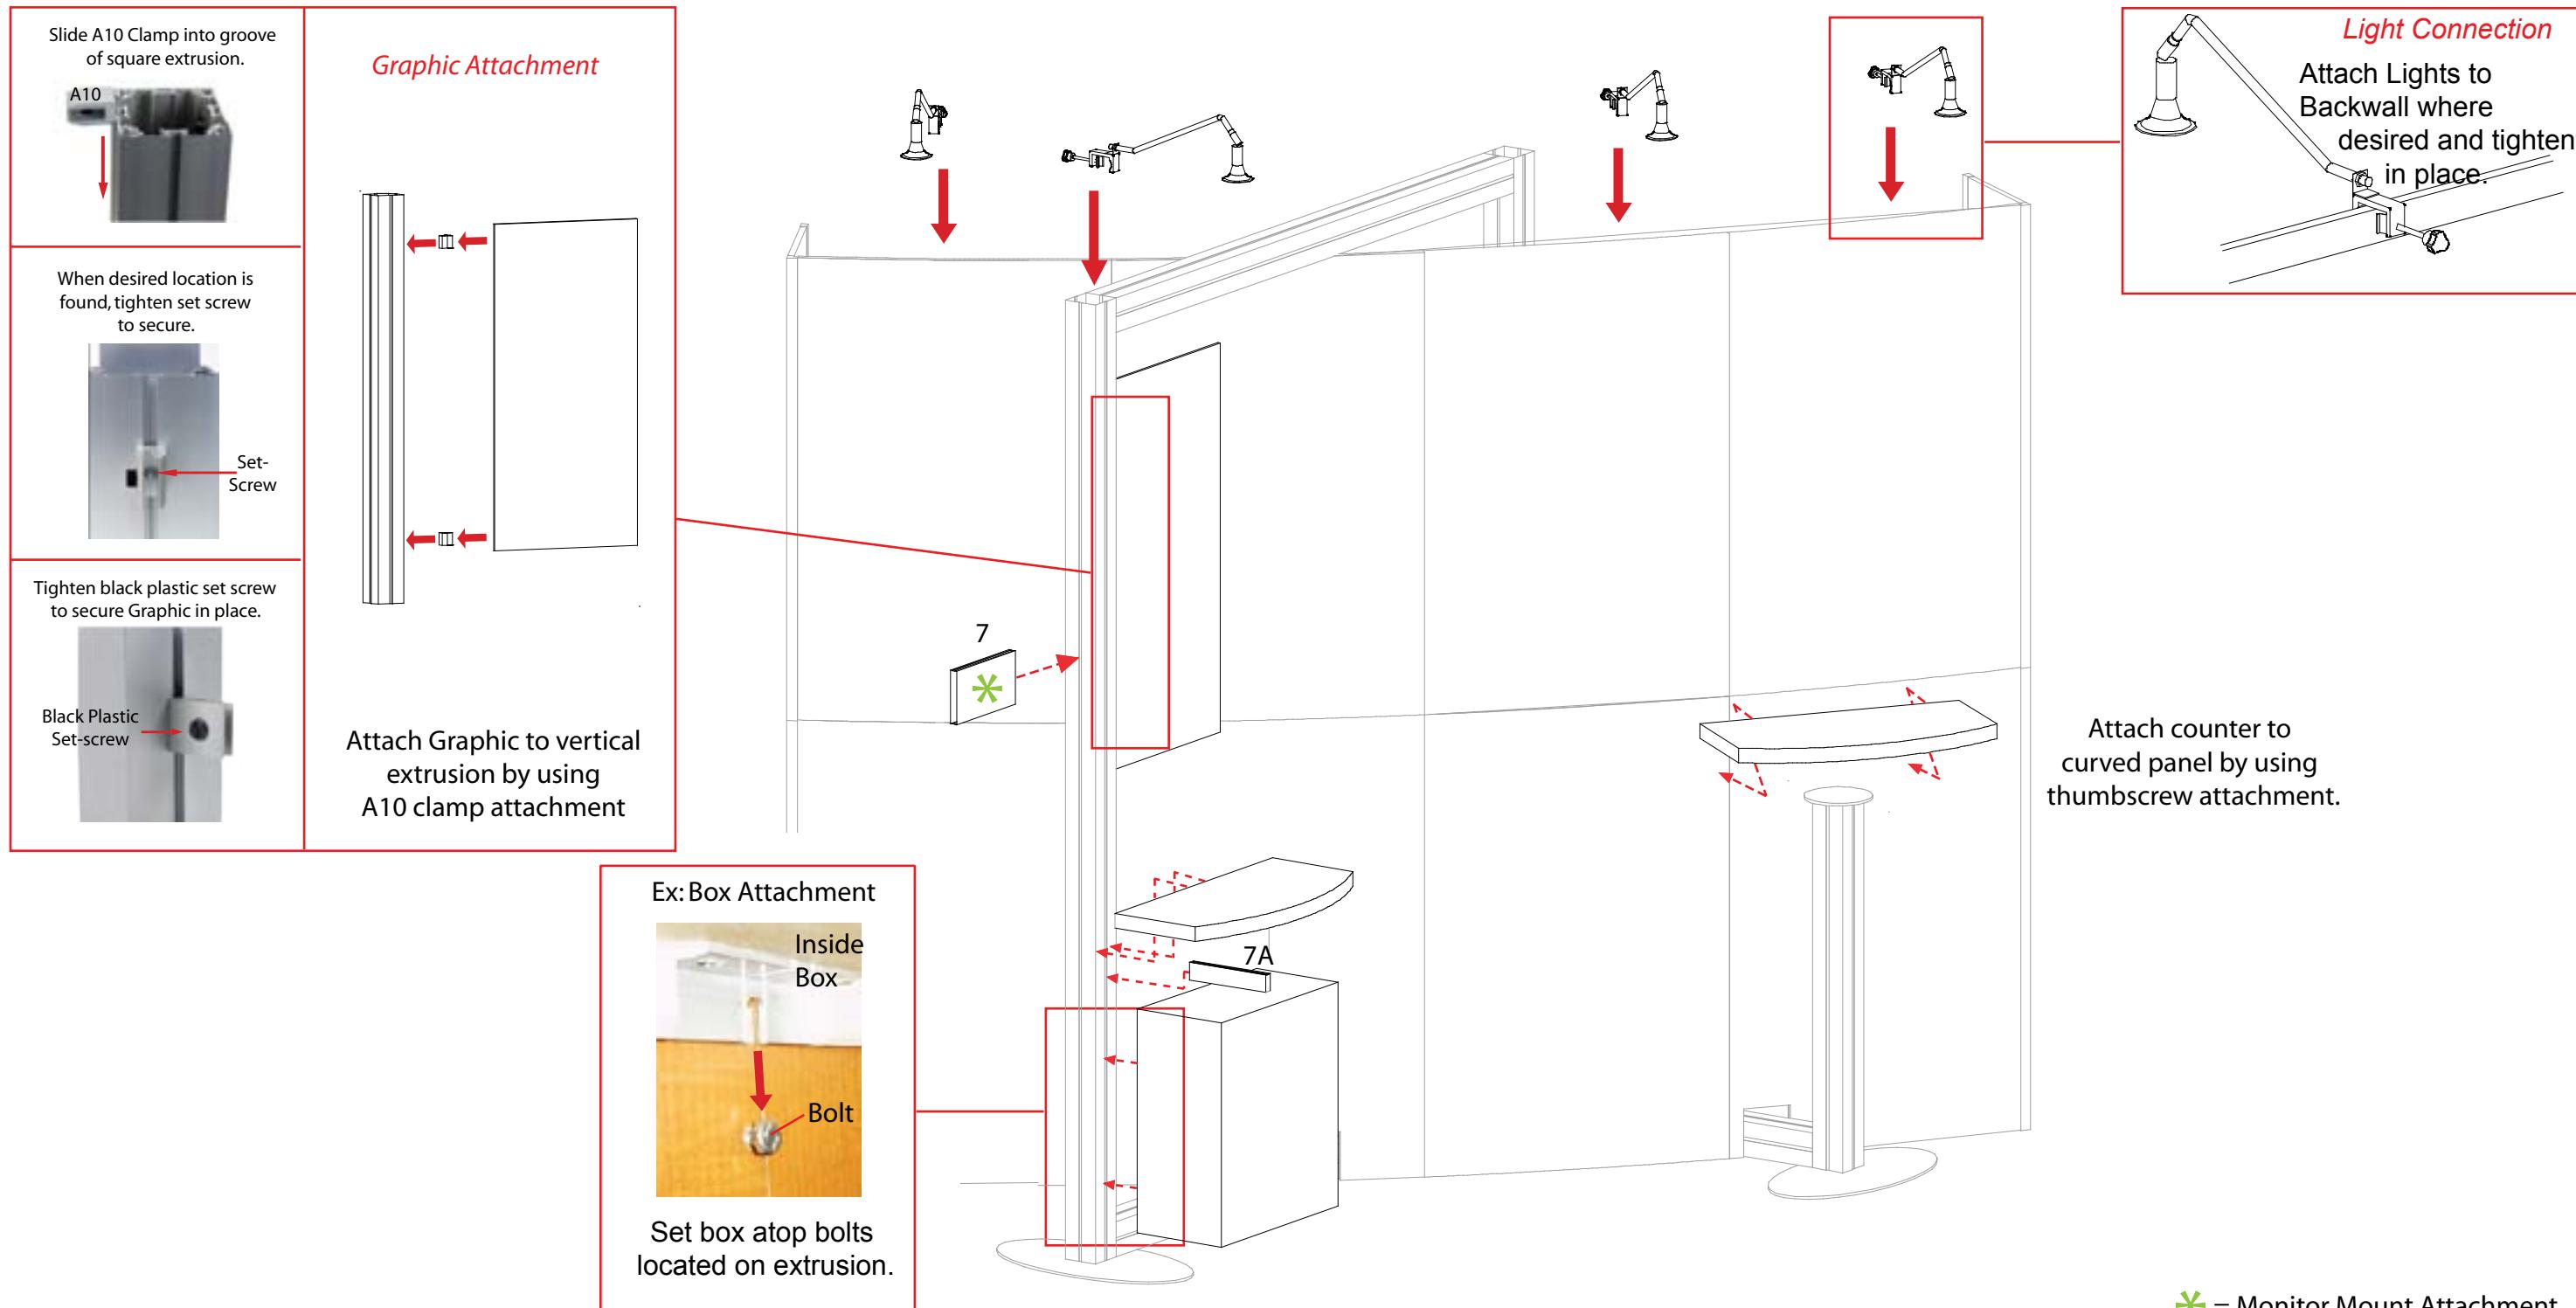


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

866.652.2100




Part Number	Qty for Step	Description
8	4	38" h Vertical Extrusion
9	1	23" w Horizontal Extrusion
10	1	19" w Horizontal Extrusion

Steps



- 1) Attach horizontal extrusions [8] to horizontal extrusions [9 and 10].
- 2) Attach plex piece to box using standoff barrels and caps as shown.
- 3) Set counter atop assembled pedestal.

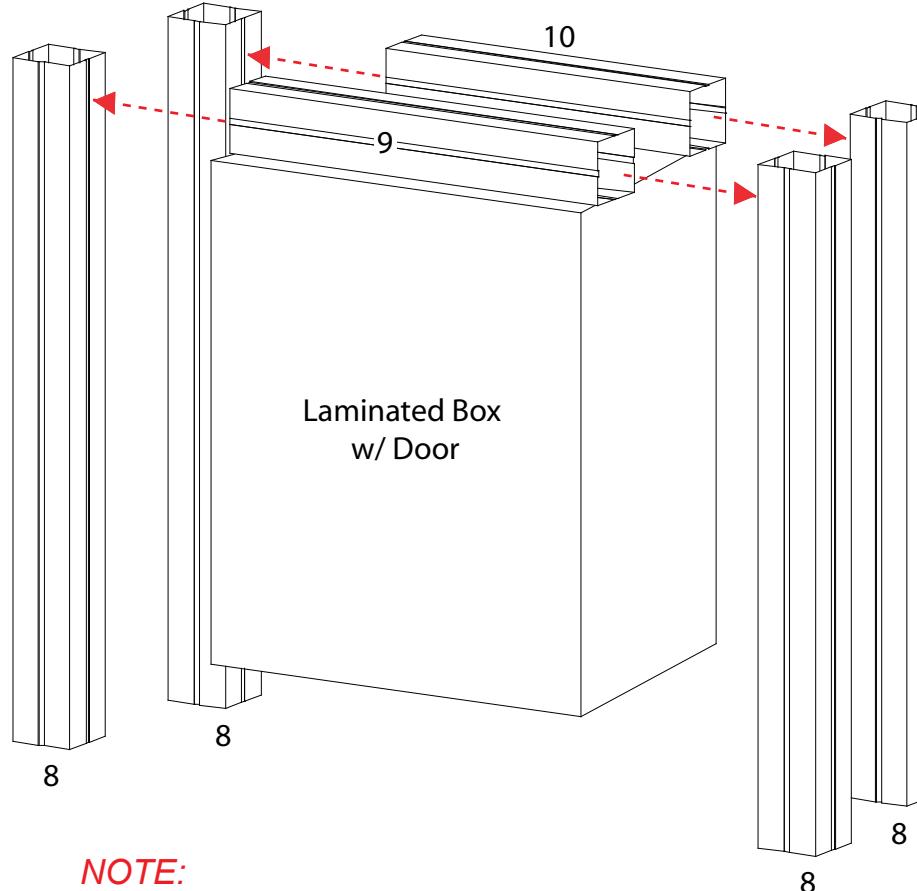**NOTE:**

Laminated Box and Extrusions [9 and 10] should remain assembled when shipping

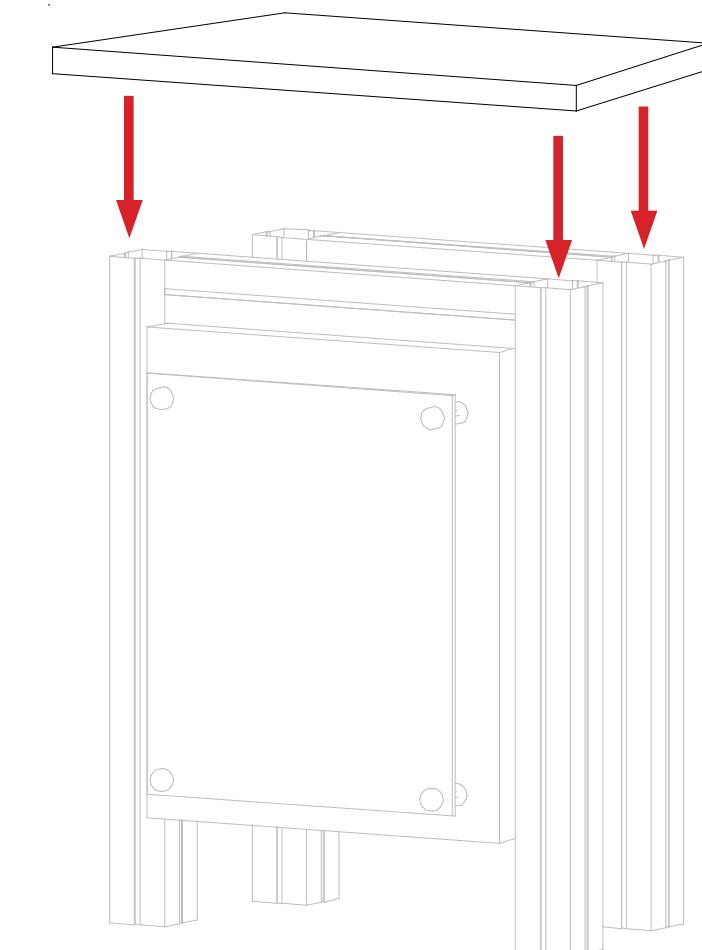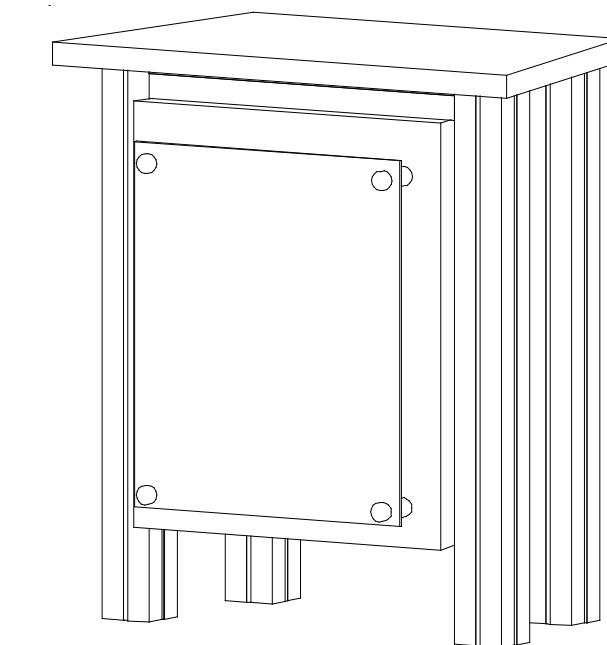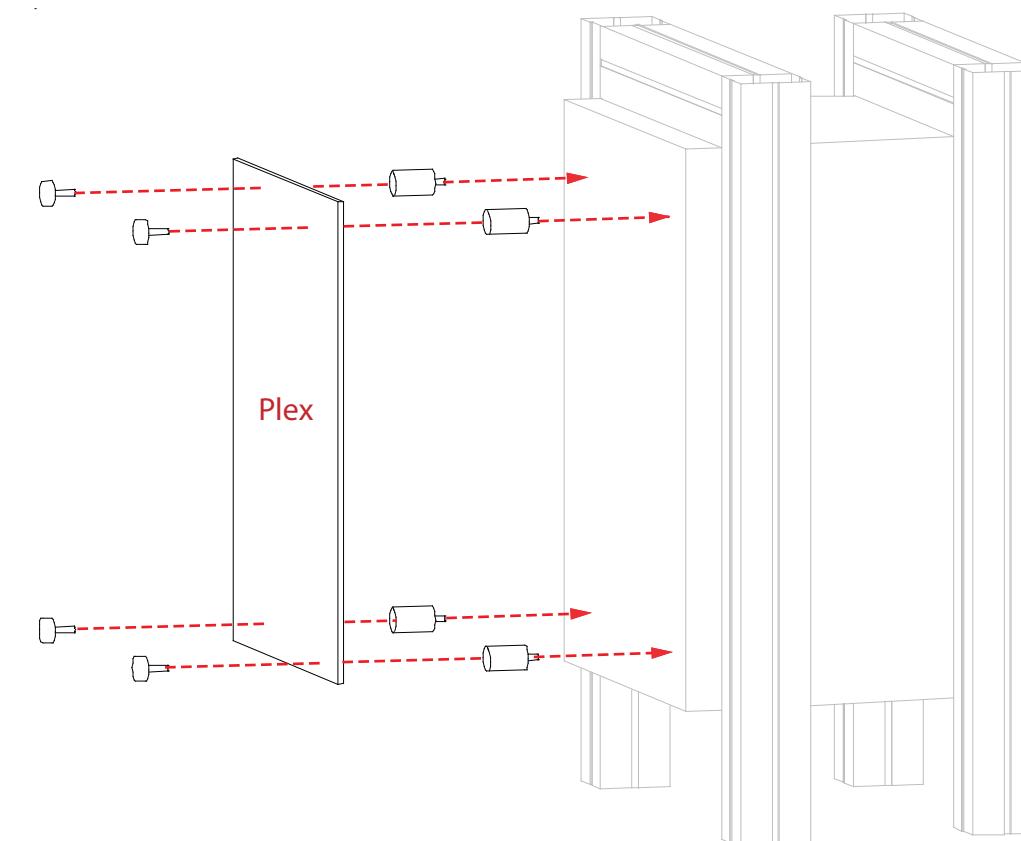

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

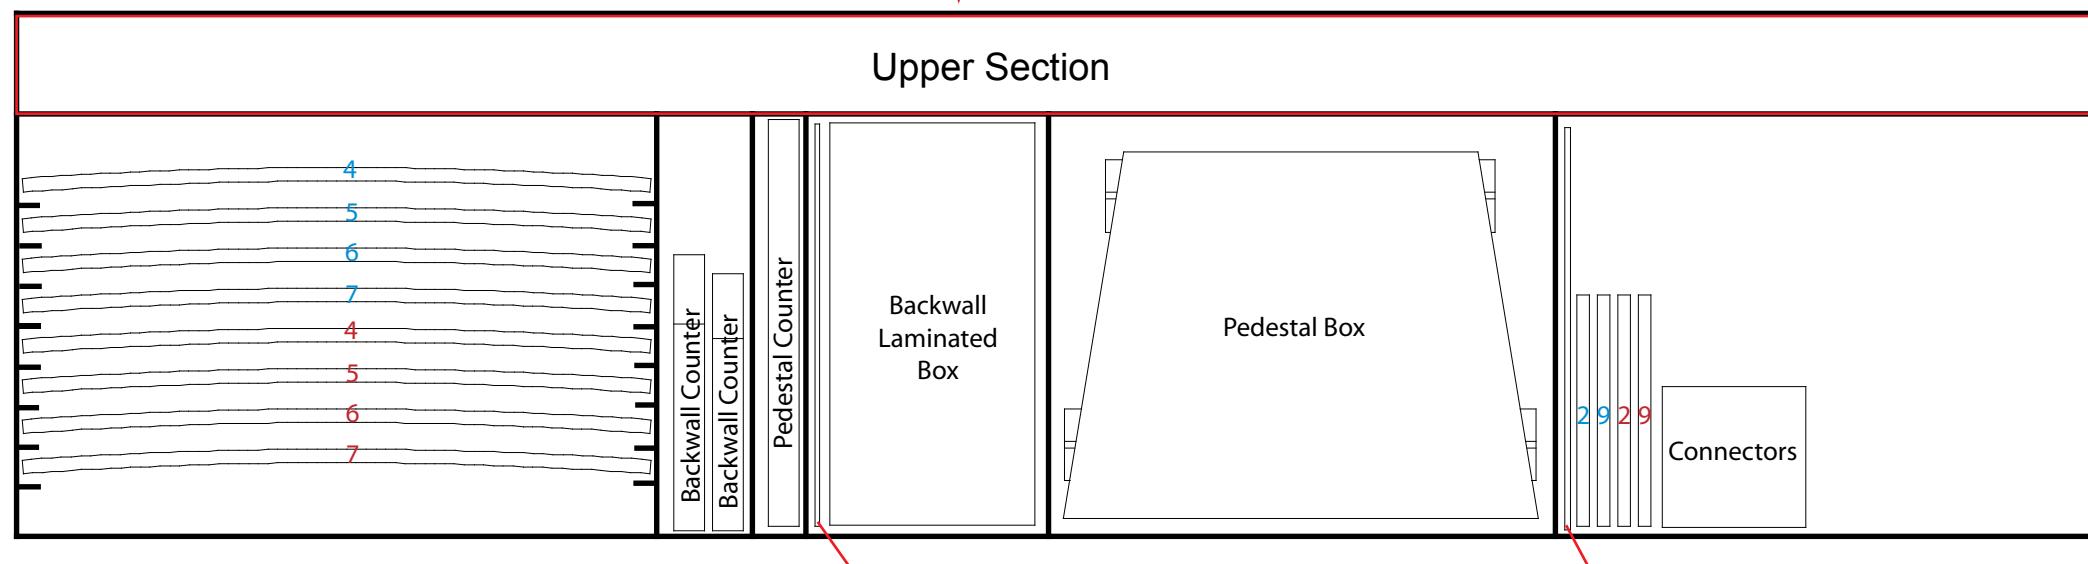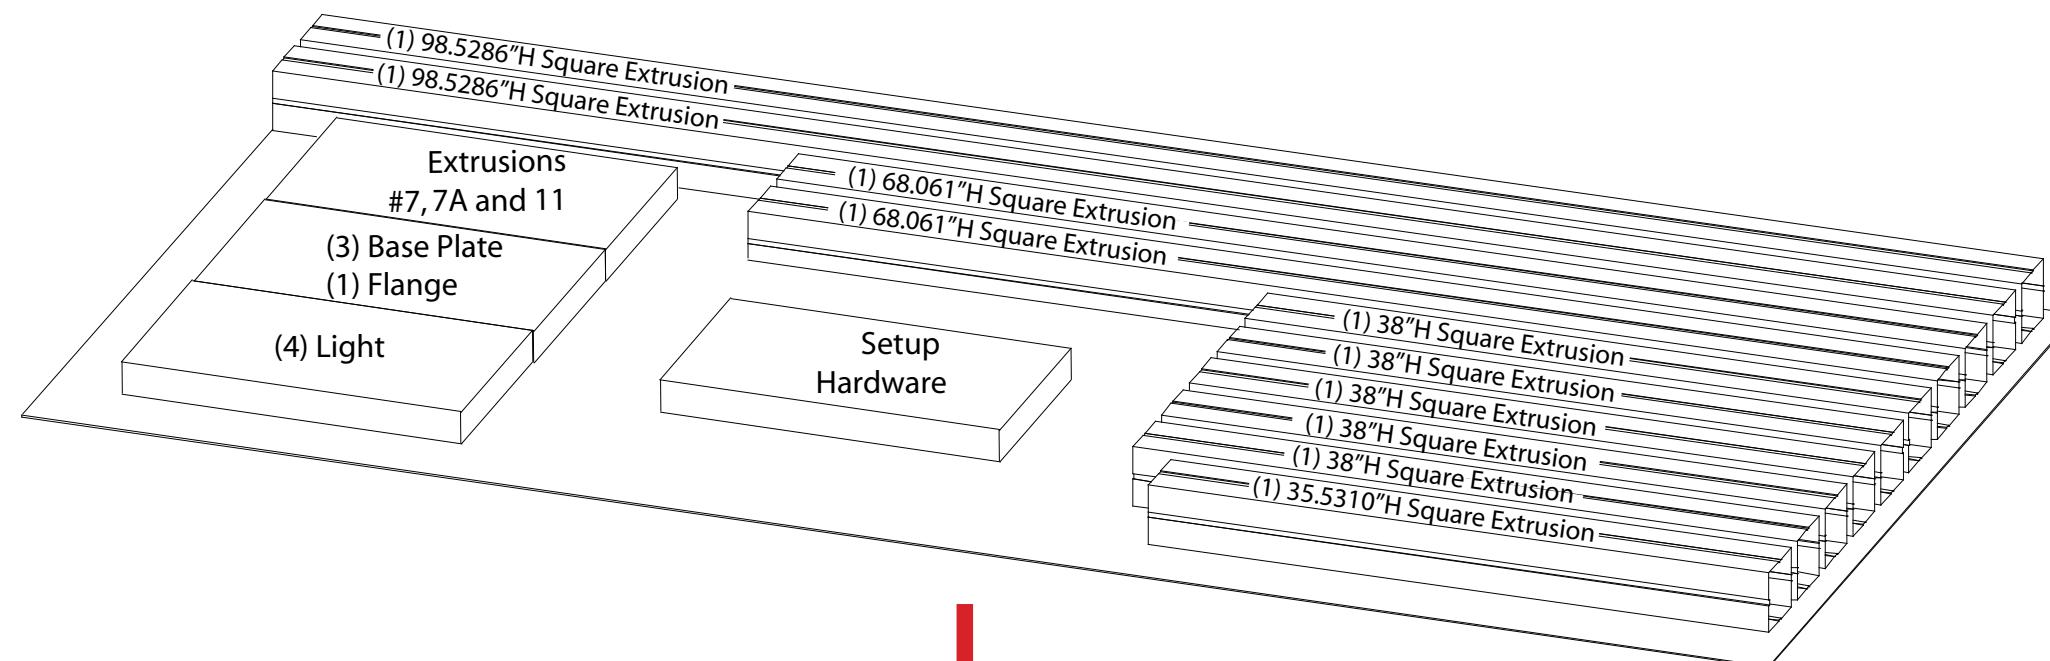

Crate Front View

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING



Crate Front View



Crate Top Section

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL
SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING